


# ML350G-10 Manual

Version 2, Published 3/7/2018

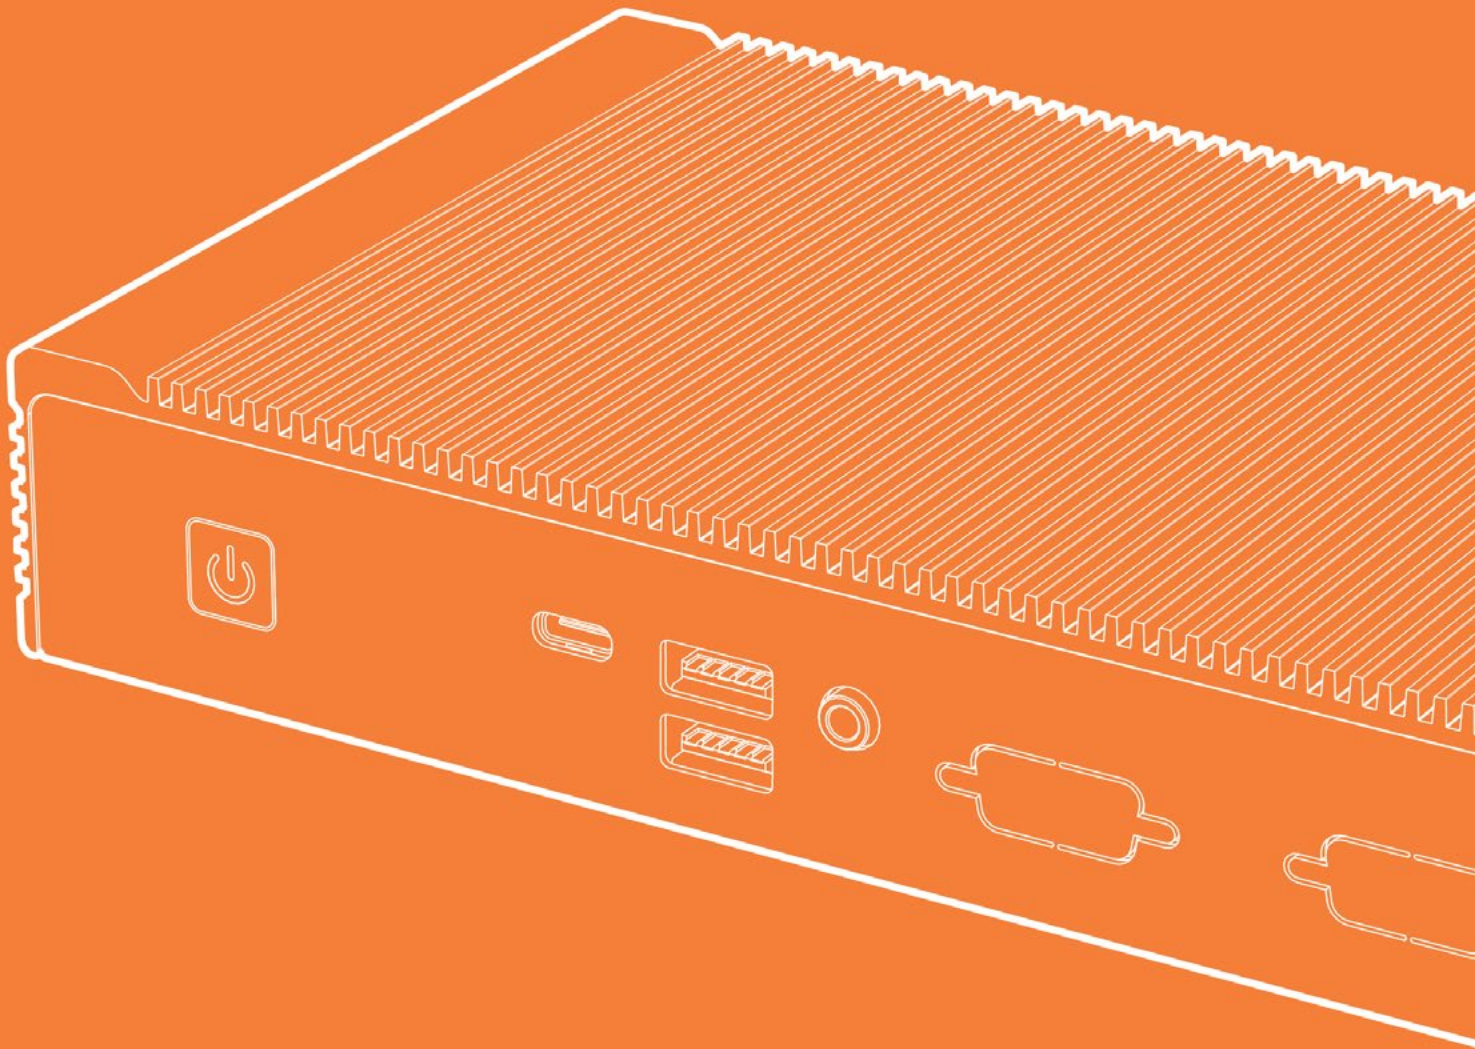

#### US Office

Phone: +1 802 861 2300  
Email: [info@onlogic.com](mailto:info@onlogic.com)  
[www.onlogic.com](http://www.onlogic.com)

#### EU Office

Phone: +31 85 2733760  
Email: [info@onlogic.eu](mailto:info@onlogic.eu)  
[www.onlogic.com](http://www.onlogic.com)

## **ML350 Quick Start Guide**

<b>1 - About OnLogic</b> .....	<b>3</b>
Contact Information .....	3
<b>2 - Legal Disclaimer</b> .....	<b>4</b>
<b>3 - Safe Use and Installation Instructions</b> .....	<b>5</b>
<b>4 - What's In The Box</b> .....	<b>6</b>
<b>5 - System Overview</b> .....	<b>7</b>
5.1 - System Diagram .....	7
5.2 - System Specifications .....	8
5.3 - Mounting Hole Pattern .....	9
5.4 - Mounting Guide .....	10
<b>6 - Motherboard Overview</b> .....	<b>11</b>
6.1 - Jumpers and Headers Guide .....	12
6.2 - Configuring Jumpers .....	13
6.3 - Onboard Headers .....	14
<b>7 - UEFI</b> .....	<b>15</b>
7.1 - UEFI Interface and Driver Downloads .....	15



## 1 - About OnLogic

OnLogic is powering innovation with highly configurable embedded and IoT computers engineered for reliability. Businesses worldwide depend on our solutions to operate in the toughest environments while tapping into the evolving Industrial Internet of Things.

This guide will introduce you to the ML350G-10 industrial fanless computer and the system specifications. For technical questions or support, please reach out via our contact information below.

You have a lot of choices when choosing computer hardware. The OnLogic Team wants to thank you for trusting our components to meet your application needs. The ML350G-10 is the result of input from partners like you. We've worked hard to create a system that meets the varied needs of industrial and IoT computing and we've manufactured this system under our strict quality assurance and immunity standards to serve you best. If you have any concerns about the quality or performance of this product, please contact us directly or [visit our support page](#).

### Contact Information

#### OnLogic Global

35 Thompson Street,  
South Burlington, VT 05403  
USA

+1 802 861 2300  
[info@onlogic.com](mailto:info@onlogic.com)

#### OnLogic Europe

De Boedingen 39  
4906 BA Oosterhout  
The Netherlands

+31 88 5200 700  
[info@onlogic.eu](mailto:info@onlogic.eu)

## 2 - Legal Disclaimer

**Intellectual Property Notice:** All material including but not limited to, text, design specifications, graphics, logos, reference, images, drawings, and software including this document and the product itself (together and separately) is owned, controlled by, licensed to, or used with permission by OnLogic, Inc., OnLogic BV, Interlogic, Inc. or the authorized agents and representatives (Collectively “OnLogic”) and is protected by copyright, trademark, and other intellectual property rights. No part of this manual may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without the written consent of OnLogic. Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners’ benefit, without intent to infringe. Information in this document is subject to change without notice.

**Legal Disclaimer:** Specifications and information contained in this manual are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by OnLogic. OnLogic assumes no responsibility for any errors or omissions that may appear in this manual. With respect to the contents of this manual, all is provided “as is” and OnLogic does not provide warranty of any kind, either expressed or implied, statutory or otherwise and expressly disclaims all implied warranties of noninfringement, merchantability, and fitness for a particular purpose. IN NO EVENT SHALL ONLOGIC, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, OnLogic SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA. Unless otherwise expressly agreed to in writing, the sale, use, etc. of any and all ONLOGIC products is governed exclusively by the terms and conditions of purchase ([www.onlogic.com/company/support/terms-conditions](http://www.onlogic.com/company/support/terms-conditions)) and/or other written agreements executed by OnLogic. Unless otherwise expressly agreed to in writing, any and all disputes arising between OnLogic and the customer shall be governed by the laws of the State of Vermont, USA and the State of Vermont shall be the exclusive venue for the resolution of any such disputes.

**Regulatory Compliance:** This digital device is designed to comply with all applicable FCC Rules Part 15 and CE compliance requirements for electronic equipment. For more detailed or additional regulatory compliance information, please see the relevant product page at [www.onlogic.com](http://www.onlogic.com) or contact OnLogic directly at [info@onlogic.com](mailto:info@onlogic.com).

### 3 - Safe Use and Installation Instructions

1. Do not open or modify the device. The device has been tested and complies with FCC and CE regulations. Modification of the device will void these certifications.
2. Install the device securely. Be careful handling the device to prevent injury and do not drop.
3. Wall or ceiling mounting device requires use of a mounting plate or pair of mounting brackets. Plate or brackets must be of metal construction and have a minimum thickness of 1mm.
4. Use M3x0.5mm Flat Head screws to attach mounting plate or mounting brackets to threaded holes on bottom of chassis. Screws should be minimum length of 4mm. Add 1mm of screw length for every mm of additional thickness of plate or bracket beyond 1.5mm.
5. Operational temperature must be between 0-50°C, or 0-40°C when using the UL listed configuration, with a noncondensing relative humidity of 10-90%.
6. The device can be stored at temperatures between 0-60°C.
7. Keep the device away from liquids and flammable materials.
8. Do not clean the device with liquids. The chassis can be cleaned with a cloth.
9. Allow at least 2 inches of space around all sides of the device for proper cooling. If device is mounted to vertical surface then recommended device orientation is so that heatsink fins allow air to rise unobstructed. Alternative orientations may result in reduced operational temperature range.
10. This device is intended for indoor operation only.
11. Use UL listed external power supply with rated output 9Vdc, 4.0A min. to 24Vdc, 1.5A min., NEC Class 2, or LPS output or equivalent.
12. Install the device only with shielded network cables.
13. Service and repair of the device must be done by qualified service personnel. This includes but is not limited to replacement of CMOS battery. Replacement CMOS battery must be of same type as original.
14. Proper disposal of CMOS battery must comply with local governance.




**WARNING:** There is danger of explosion if the CMOS battery is replaced incorrectly.

#### Wireless

If this product was configured with a wireless device, the FCC and IC IDs will be detailed on a label on the chassis.



## 4 - What's In The Box

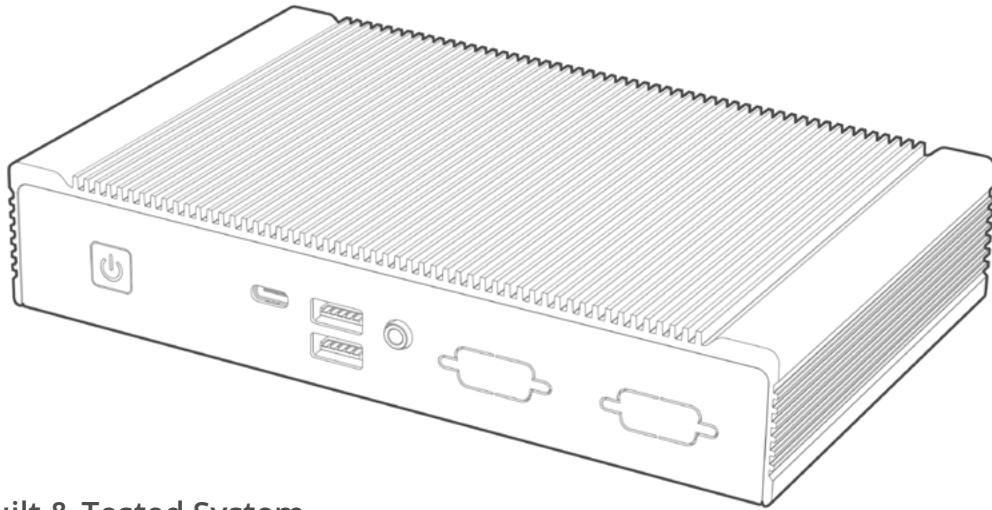

**ML350 Built & Tested System**






**Any Selected Accessories**

If you purchased additional items such as specific mounting brackets, power supplies or antennas, they will be located in the system box or within the outer shipping carton.

All drivers and product guides can be found on the corresponding product page at [www.onlogic.com](http://www.onlogic.com).

## 5 - System Overview


### 5.1 - System Diagram

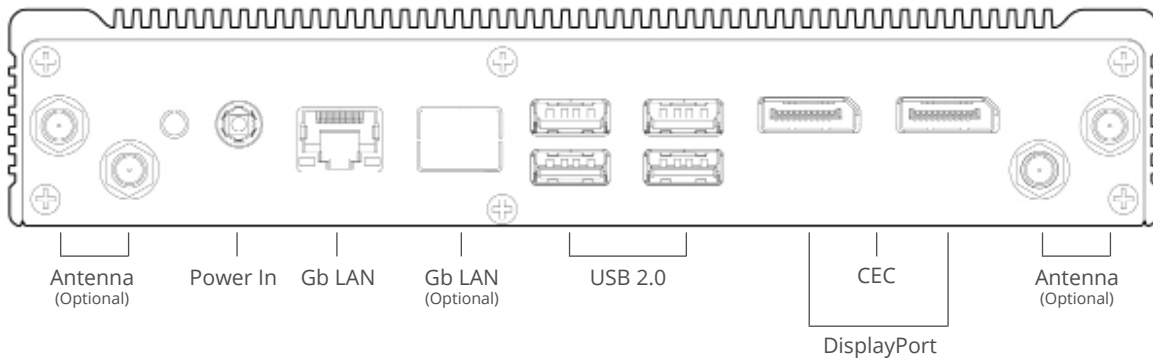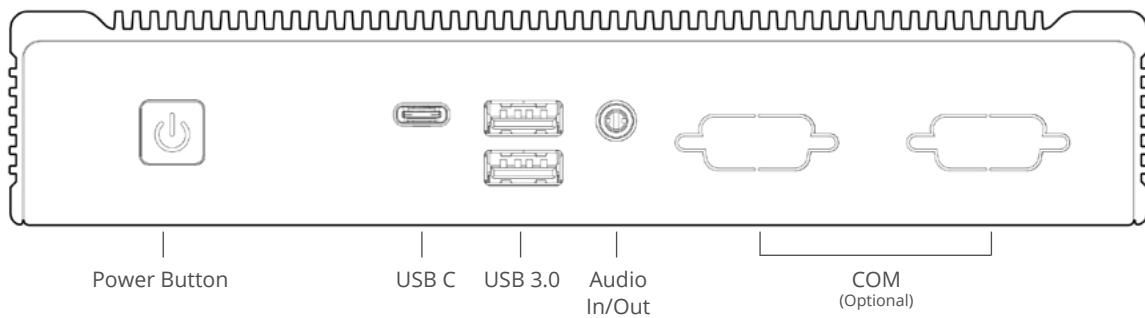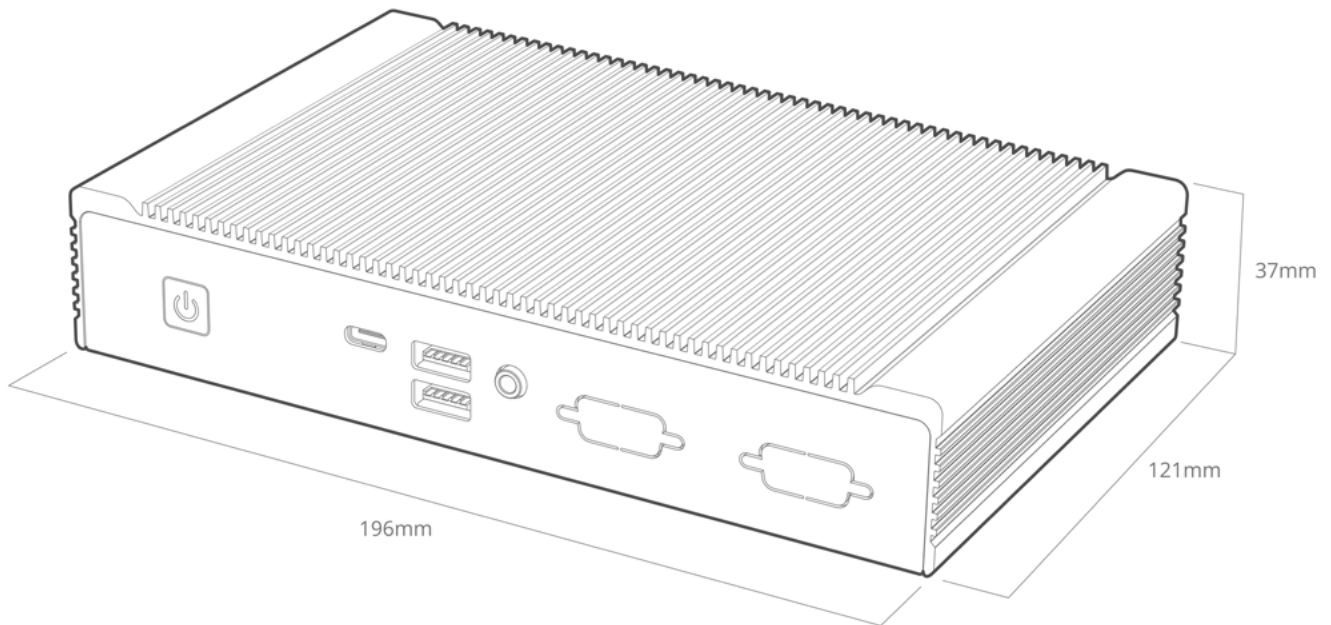

## 5.2 - System Specifications

		N3350	N4200
<b>Processor and Chipset</b>	Intel Apollo Lake with integrated graphics		
<b>Memory</b>	1 x 204-pin DDR3L SO-DIMM up to 8GB		
<b>Audio Controller</b>	Realtek ALC283 audio codec		
<b>Expansion</b>	Full-size/half-size mPCIe with PCIe, SATA, and USB signal	1	
	Full-size mPCIe with PCIe and USB signal	1	
	Full-size mPCIe with SATA and USB signal	1	
<b>Rear I/O</b>	DisplayPort, Version 1.2 (HDMI CEC option, supports dual mode and MST)	2	
	GbE LAN	1	2
	USB2.0	4	
<b>Front I/O</b>	USB3.0	2	
	USB type C 3.1	1	
	Audio jack; line-in/out	1	
	Power button	1	
<b>Onboard I/O</b>	USB2.0 pin header (2 USB supported)	1	
	RS-232/422/485 pin header	2	
	SATA power	1	
	CEC header	1	
	AT mode jumper header	1	
	RTC battery header	2	
	Ambient temperature header	1	
<b>Super I/O Controller</b>	NCT6793D		
<b>LAN Controller</b>	RTL8111G		
<b>UEFI</b>	Unified Extensible Firmware Interface (UEFI) resident in a Serial Peripheral Interface (SPI) Flash device Support for Advanced Configuration and Power Interface (ACPI) and System Management BIOS (SMBIOS)		
<b>Environment</b>	Operating temperature: 0°C ~ 50°C		
	Operating temperature for UL listed configurations: 0°C ~ 40°C		
	Operation humidity: 10% ~ 90%		
	Storage temperature: 0°C ~ 60°C		
<b>Dimensions</b>	Storage humidity: 5% ~ 95%		
	196 x 121 x 37mm		
<b>Mounting</b>	Wall, DIN, VESA-75/100. (Additional mounting hardware required)		
<b>Certifications</b>	CE (EN 55022, EN55032, EN 55024, EN 60950-1) FCC part 15b, Class A RoHS, WEEE UL/IEC 62368-1, UL/IEC 60950-1		

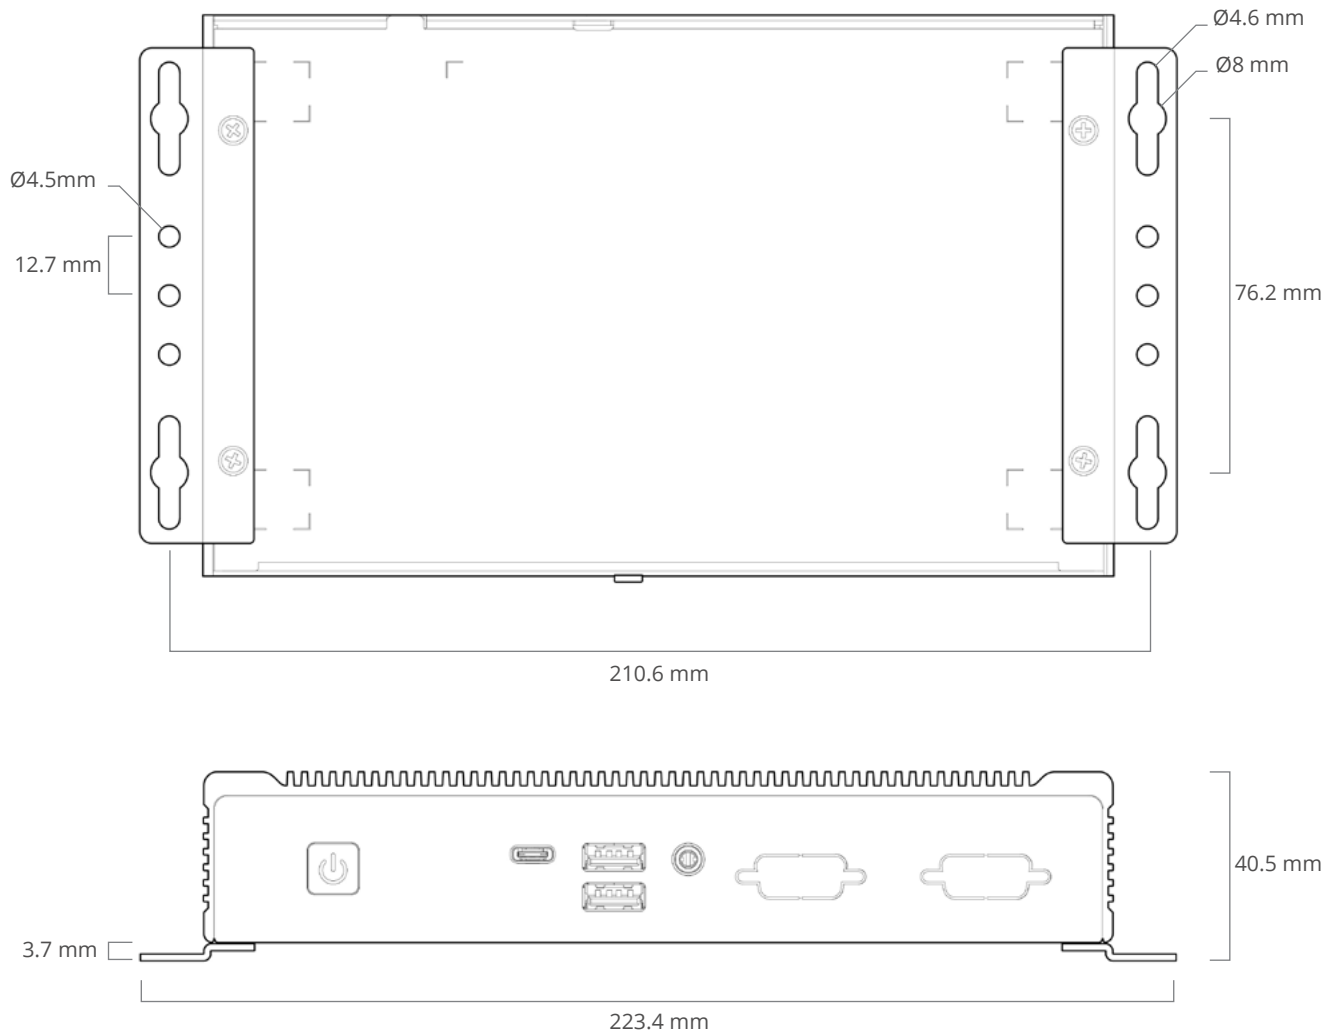

**5.3 - Mounting Hole Pattern**


## 5.4 - Mounting Guide

### **Wall Mounting**

Step 1: Attach wall mount brackets to chassis

Step 2: Mark and prep holes in surface for mounting

Step 3: Fasten system to surface

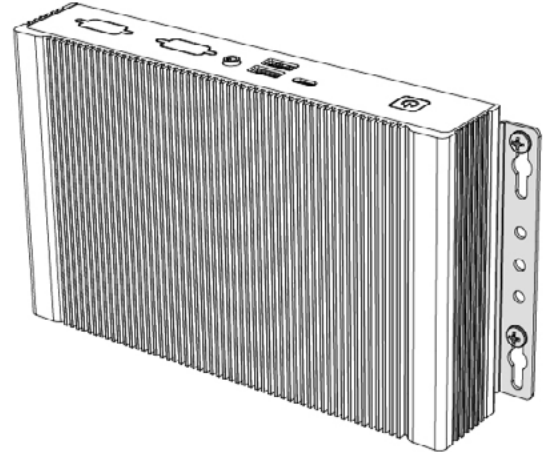


### **VESA Mounting**

Step 1: Install 4 VESA Screws into your display/surface

Step 2: Attach VESA bracket to the chassis

Step 3: Hang combined system and bracket to display/surface

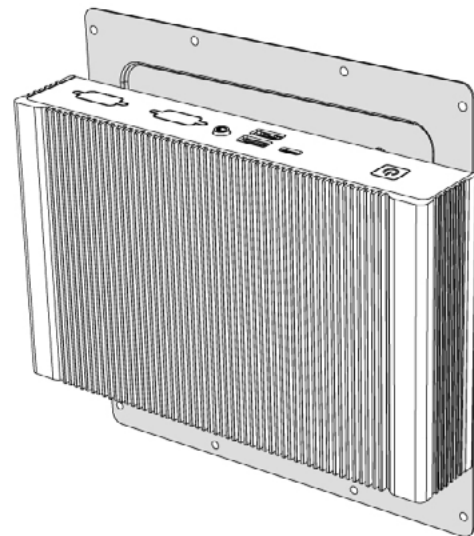


### **DIN Rail Mounting**


Step 1: Attach wall mounting brackets to the chassis

Step 2: Attach DIN Rail Clips to the mounting brackets

Step 3: Clip system to the DIN Rail

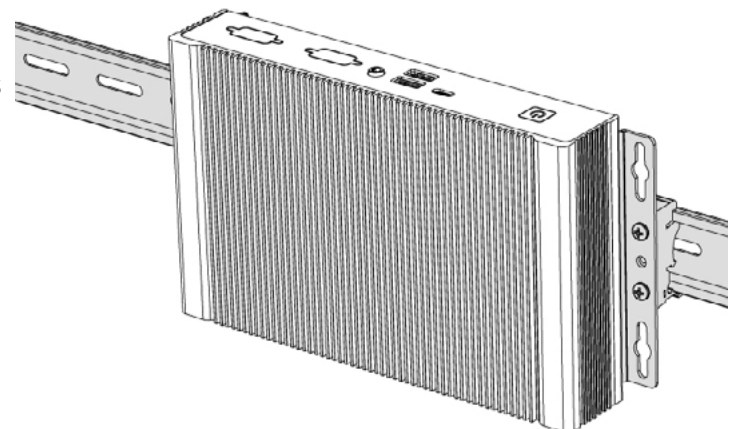

## 6 - Motherboard Overview

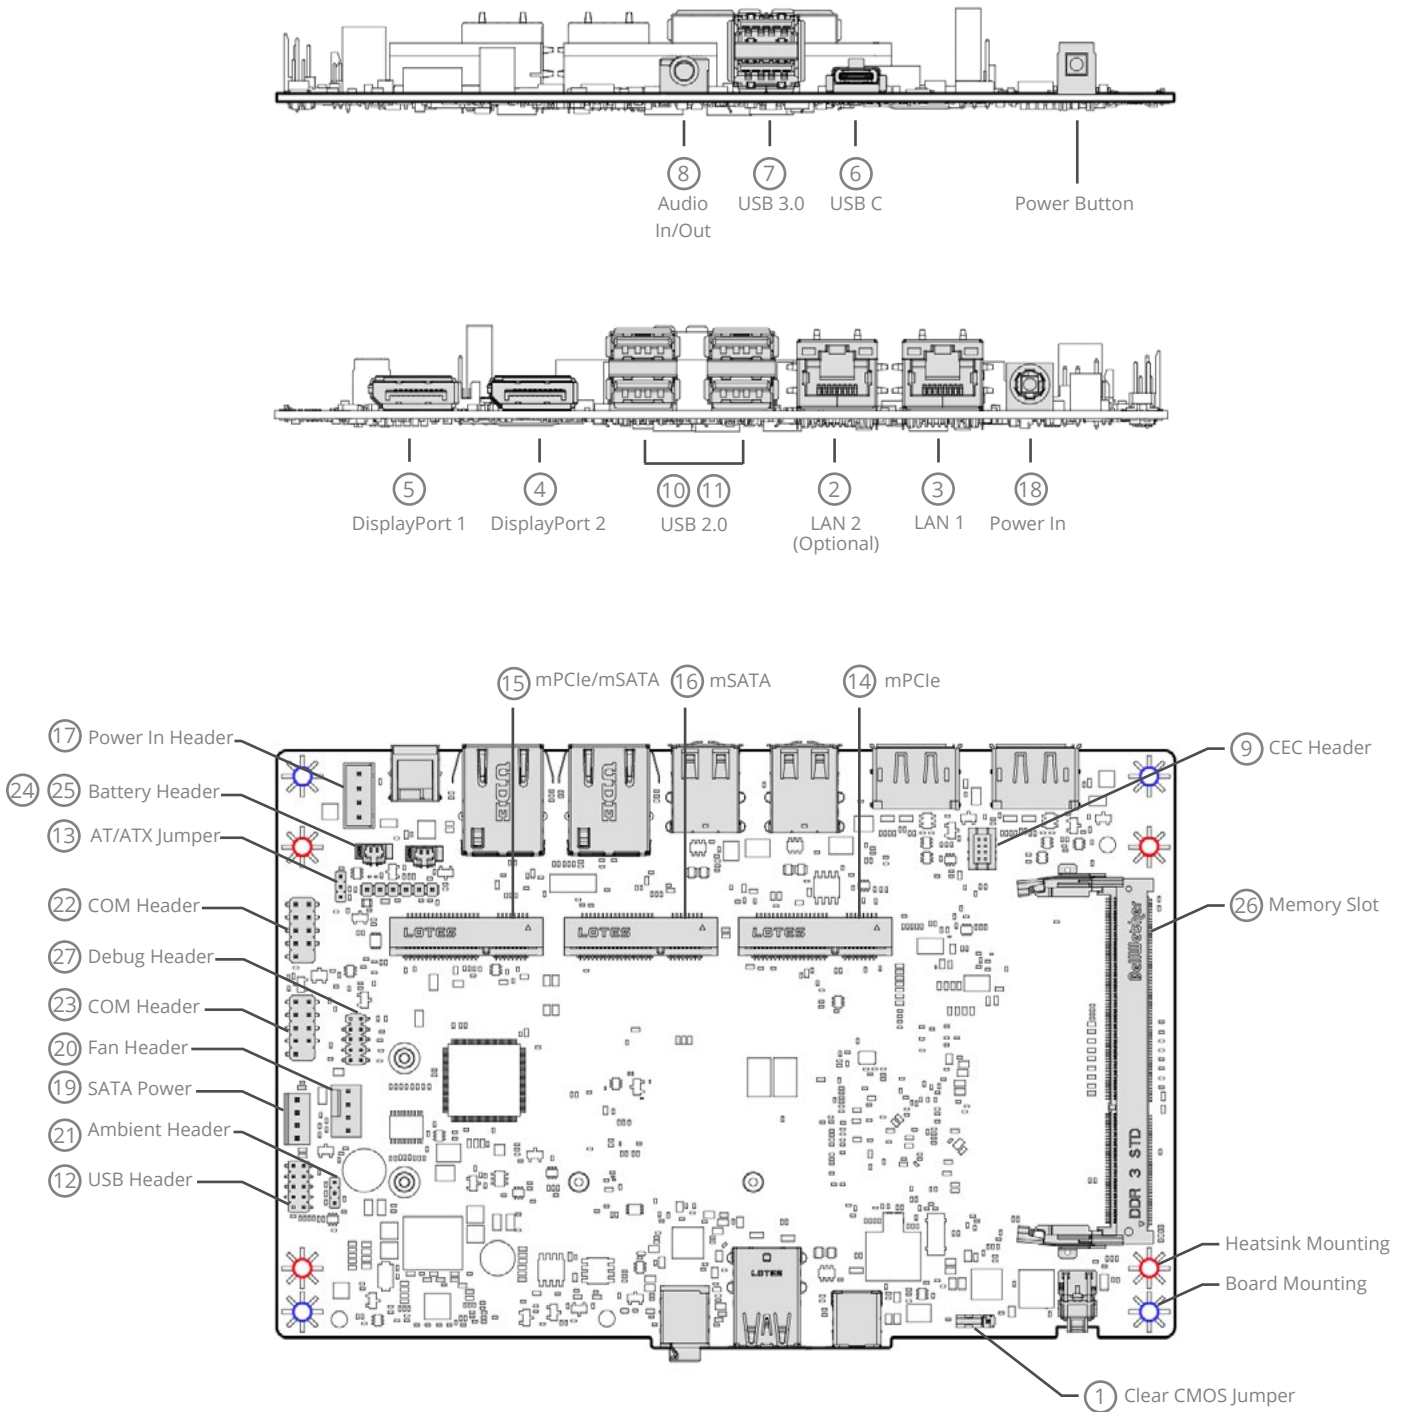

## 6.1 - Jumpers and Headers Guide


Number	Location	Function
1	J1_BIOS	BIOS Load Default Header/Clear CMOS
2	J2	LAN 1 Connector
3	J3	LAN 2 Connector
4	J4	DisplayPort 1
5	J5	DisplayPort 2
6	J6	USB Type C Connector
7	J7	USB 3.0 Connector
8	J8	Audio Connector
9	J9_CEC	CEC Header
10	J10	USB 2.0 Connector
11	J11	USB 2.0 Connector
12	J12_USB	USB 2.0 Header
13	J13_AT_ATX	AT/ATX Mode Jumper
14	J14_PCIE	Mini PCIe (PCIe+USB)
15	J15_MUX	Mini PCIe (PCIe+SATA+USB)
16	J16_SATA	mSATA (SATA+USB)
17	J18_Power_In	4 Pin Power Connector
18	J20	DC In
19	J21_SATA	SATA Power Header
20	J22_FAN	FAN Header
21	J23_AMBIENT	Ambient Sensor Header
22	COM1	Serial Port 1 Header
23	COM2	Serial Port 2 Header
24	XBT1_BATTERY	Coin Battery Header
25	XBT2_BATTERY	Coin Battery Header
26	SO_DIMM1	Memory Slot
27	DEBUG	Debug Header

Refer to the following diagrams for configuring jumpers and onboard headers.

## 6.2 - Configuring Jumpers

### J1\_BIOS


The J1\_BIOS jumper loads the default BIOS settings. Short pins 2-3 for normal operation. Short pins 1-2 to clear the CMOS and reset the system setup configuration to default settings. If you experience challenges powering up, short pins 1-2 to troubleshoot.

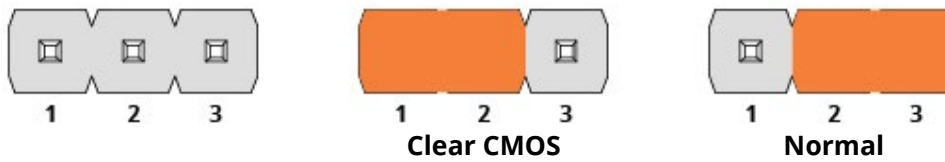

### J13\_AT\_ATX

AT = Auto power on.

ATX = No auto power on.

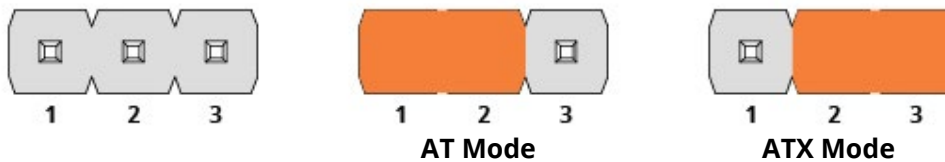

### 6.3 - Onboard Headers

An onboard header is a connection on the motherboard that permits connecting a peripheral component to an external port on the system

#### J9\_CEC


The ML350G-31 can be configured with a module that allows for CEC functionality. The J9\_CEC connector includes wiring connections for the HDMI Consumer Electronics Control (CEC).

#### COM1 and COM2

The motherboard includes the following COM ports:

COM1: I/O port 0x3F8, IRQ 4

COM2: I/O port 0x2F8, IRQ 3

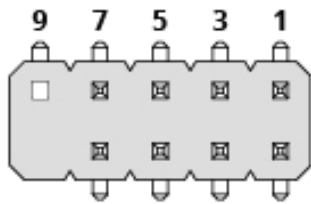

	RS232	RS422	RS485
1	DCD	TX (negative)	TX- / RX-
2	RXD#	RX (positive)	TX+ / RX+
3	TXD#	TX (positive)	N/A
4	DTR	RX (negative)	N/A
5	GND	GND*	GND*
6	DSR	N/A	N/A
7	RTS	N/A	N/A
8	CTS	N/A	N/A
9	RI	N/A	N/A
10	Key	N/A	N/A

\* GND is optional as a signal return path for RS422/485 and may not be valid for all applications.

#### Power Headers J18\_POWER IN

Connect DC power in to J18\_POWER IN.

 


1	V+
2	GND
3	GND
4	V+



### J23\_Ambient Header


The J23\_AMBIENT connector provides System Management Bus (SM Bus) communication.



1	SMBus Clock
2	SMBus Data
3	GND

### J12\_USB

The J12\_USB connector supports two USB ports.


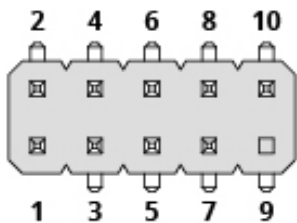


1	5V_USB
3	Data (Negative)
5	Data (Positive)
7	GND
9	Key

2	5V_USB
4	Data (Negative)
6	Data (Positive)
8	GND
10	None

### XBT1\_BATTERY and XBT2\_BATTERY

Connect the system and backup batteries to the XBT1\_BATTERY and XBT2\_BATTERY connectors.

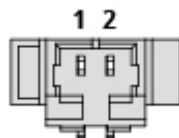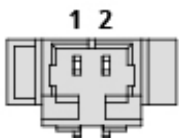

1	3V
2	GND

1	3V
2	GND

## 7 - UEFI

The ML350G-10 supports UEFI 64 bit only. UEFI updates can be downloaded directly from the [system's product page at http://www.onlogic.com/ml350g-10](http://www.onlogic.com/ml350g-10).